7" TOUCH SCREEN eBOOK READER & INTERNET TABLET with ANDROID™

User's Manual

EBW404

Introduction

Notes, Cautions, and Warnings 3

Company Statement 3

Safety and Packaging

Important Safety Precautions 4

Cleaning Your Device 4

Package Contents 5

Using the eGlide Reader

eGlide 2.2 Reader Functions 6

Understanding Your eGlide 2.2 Reader 8

Touch Screen 8
Screen Orientation 8

Setting Up Your eGlide 2.2 Reader 9

Charge the device: 9
Battery Management 9
Turn the device ON/OFF: 9
Calibrate the Touch Screen 10
Setup the Wi-Fi Network: 10
Advanced (Manual) Connection to a Wi-Fi Network 11
HOME Screen 12

All Applications 13

Pre-loaded Applications 13
Weather 14
Recording 15
Music 15
Video 17
Photos 18
File Explorer 19
Web Browser (requires Wireless Internet) 21
Email (requires Wireless Internet) 23
Accessing eBooks 25
Reading eBooks 27
Settings 29
Trouble shooting 29

Specifications

Specifications 30

Limitations and Liability

Limitations of Liability Statement 31

Thank you for purchasing the eGlide Reader 2.2. The operational guidelines in this User Manual will ensure a quick and convenient guide to its main functions and provide the user with trouble-free use for business and pleasure. Please read the instructions carefully before use.

Notes, Cautions, and Warnings

Note: A NOTE indicates important information that helps you make better use of your device.

CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.
© 2011 Ematic Inc. All rights reserved.

This EBOOK READER contains Adobe ® Reader ® Mobile software under license from Adobe System Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe System Incorporated.

Windows is a registered trademark of Microsoft.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products.

Company Statement

- Specifications are subject to change without notice.
- Always backup your important data. Ematic assumes no responsibility for any loss of data / music / video/ other files if the product is used in a careless manner. Please follow the user manual for standard operation, and make timely backups.
- This manual has been carefully checked, however, we assume no responsibility for any errors.
- If there are any discrepancies between the pictures in this manual and the actual product, the actual product prevails.
- Ematic cannot be held responsible for any downloading of illegal eBooks, music, or videos, or for any content that is illegal.

Important Safety Precautions

Always follow these basic safety precautions when using your device. This reduces the risk of fire, electric shock, and injury.

- Excess use of headphones at high volume may cause permanent hearing impairment.
- Avoid strong impact or any collision with the product.
- Avoid using this product in the following conditions: high and low temperature, moisture, dust, strong magnetic fields and long-term exposure to sunlight
- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- This product is a high-precision electronic device. Do not remove the cover or disassemble in any way. There are no user-serviceable parts inside.
- Only use permitted chargers and accessories. Use of any other type of accessories violates the warranty and may be dangerous.

Cleaning Your Device

- Treat the screen gently.
- To clean fingerprints or dust from the screen, use a soft, non-abrasive cloth such as a camera lens cloth.
- Use a damp cotton cloth to wipe the product shell.
- Do not use any chemical cleaning solutions on the product.

Package Contents

Check the contents of the package to verify it contains the following:

- eBook reader
- USB cable
- Wall Charger
- Headphones
- User manual
- Kobo offer
- eMusic Trial Offer

eGlide 2.2 Reader Functions

Buttons/Connectors/Parts	Functionality
A. Power	• If the device is OFF, press and hold the power button until the Android bar is displayed to power ON the device. • If the device is ON, press and hold the power button until the POWER OFF option is displayed. Press POWER OFF and then tap OK on the screen to power OFF the device. • If the device is in SLEEP MODE, press and release the power button quickly to turn sleep mode ON and OFF.
B. Previous	• Press to go back to the previous page.
C. Volume	•Press to go forward to the next page.
D. Return/Back	• Press to return to the previous screen, to close a dialog box, a menu, or a message.
E. Home	• Press to return to the HOME page/screen.
F. USB Slot	• Connect to a computer through the USB cable.

Buttons/Connectors/Parts	Functionality
G. TF Card Slot	• Insert a microSD card into the TF Card Slot. NOTE: The device supports a maximum 6GB microSD card.
H. Power Interface	• Connect the power adapter to an electrical outlet and then connect to the device to charge the battery.
I. MIC	• Microphone
J. Headphone	• Connects to headphones and automatically switches audio output from the audio speakers to the headset.

Understanding Your eGlide 2.2 Reader

Touch Screen

Your device has a multi-touch sensitive screen that allows quick, easy and convenient navigation for all applications.

Throughout this User Manual, you are instructed to use the following navigation methods:

Action	Response
Tap	
Quickly tap and release one time on the screen.	Selects the items on the screen including options, entries, images, and icons. Starts applications. Presses the buttons on the screen. Inputs text using the on-screen keyboard or number keypad.
Swipe	
Touch and slide your finger across the screen and then release.	Moves items such as images and icons on the screen. Moves the adjustment icon along a track to change a setting (i.e., volume, brightness, screen unlock, etc.) Moves the desktop screen horizontally to expose additional display space.
Touch and Hold	
Touch and hold in place approximately 2 seconds and then release.	Displays an options window. Moves applications from the **All Application** screen to the desktop or a folder. Downloads Android applications direct from a website. Deletes email accounts and contacts.

Screen Orientation

With the built-in G sensor, the orientation of the screen automatically changes between Portrait and Landscape when the device is rotated.

Setting Up Your eGlide 2.2 Reader

Charge the device:

1 Plug the power adapter into an electrical wall outlet.
2 Connect the power adapter to the device's power interface port to fully charge the battery before use (approximately 4 hours).
    a. While charging, the battery charge indicator will show: .
    b. When fully charged, the battery FULL indicator will show: .

NOTE: When the battery is out of power, wait at least 1 second before turning the device ON again.

NOTE: The device can be used while the battery is charging, although the charging time is longer when operating and charging at the same time.

Battery Management

The battery is not fully charged out of the box, so it is recommended you charge the battery for at least 4 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- The lithium-ion battery has no need to discharge. It can be charged when the reader still has some power.
- When the reader is not in use, recharge the device every two weeks to maintain maximum performance of the lithium ion battery.
- Never leave the battery fully discharged for a long period of time.
- Do not charge the reader under a high temperature environment (e.g. in sunlight.

Turn the device ON/OFF:

To turn the device ON:
1 Press and hold the POWER button until the Android bar is displayed.
2 Release the POWER button.

NOTE: It may take a few minutes for the system to start-up. Wait before proceeding.

To turn the device OFF:
1 Press and hold the POWER button until the option to "Power OFF" is displayed.
2 Tap "Power OFF".
3 Tap "OK".

Calibrate the Touch Screen

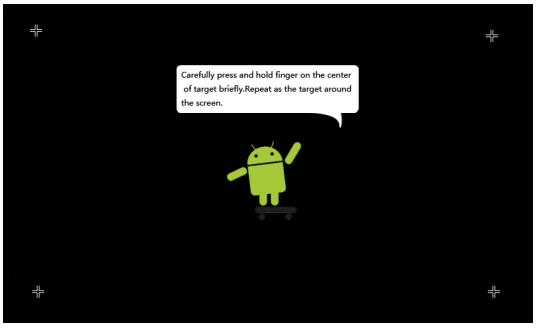

1 From the ADVANCED TASK MANAGER application, tap “Calibrate” on the touch screen.

2 Follow the on-screen instructions to calibrate the screen and to decrease the response time to your touch.

Setup the Wi-Fi Network:

NOTE: Since many features require a Wi-Fi connection, it is recommended that the Wi-Fi network be set up with the first use.

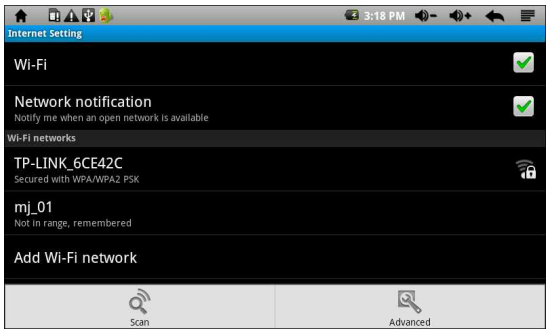

1 From the INTERNET SETTING menu, tap “**Wi-Fi”** to enable a Wi-Fi connection.

NOTE: A indicates Wi-Fi is enabled.

2 Tap “Add Wi-Fi network” to allow the device to automatically scan and to list all the local Wi-Fi Networks found in range of the device.

NOTE: A indicates secure networks that require a login name/password to connect.

3 Tap the desired network to which you want to connect.

4 Enter the **Network Information** (password), if applicable.

5 Tap **Connect** to allow the device to attempt to establish a connection to the selected Wireless Internet port.

6 If the connection is successful, the message “Connected to (your network name)” will appear under the Internet Settings.

Advanced (Manual) Connection to a Wi-Fi Network

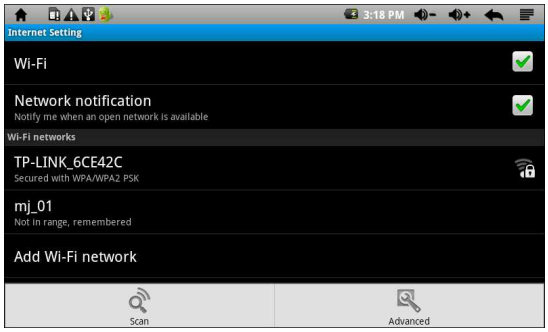

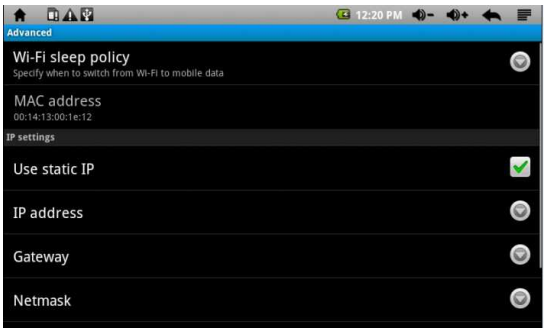

1 From the INTERNET SETTING menu , tap to enter the ADVANCED settings menu.

2 Select “Use Static IP”.

3 Enter the required **Network Information**

4 Press to SAVE or to CANCEL the settings.

HOME Screen

The HOME screen displays widgets, folders, and shortcuts that provide easy access to your favorite or frequently-used applications.

NOTE: Touch the HOME button to return to the HOME screen at any time.

Icon	Description
	a Return to HOME from other apps
	b Detect new device
	c Wi-Fi enabled indicator
	d Battery charge status
	e Current Time
	f Volume reduction icon
	g Volume increase icon
	h Back icon
	i Function Menu icon, Displays overlay menu
	j Weather forecast for selected cities worldwide**
	k Date
	l Search criteria
	m “Go”
	n Recorder
	o Enter history
---	p Scroll left/right to view recently-read eBooks

Icon	Description
	q Enter eBooks library
---	r Scroll up/down to view all eBooks
	s Wallpaper; Scroll left/right to view wallpaper
	Tap to view the **All Applications** screen

** Requires connection to Wi-Fi network.

- Tap on any application icon to launch it.
- Finger slide histories and libraries to scroll left/right and up/down.

All Applications

Pre-loaded Applications

Application		Description
	Video	Play and manage video files.
	Adv Task Mgr	Perform device management tasks
	Alarm Clock	Use as alarm clock with scheduled alarms.
	Appoke Market	Download applications quickly and easily.
	Audio Player	Play and manage audio files.
	Box.net	Store large files online
	Browser	Access the Internet and “surf the web” whenever desired.
	Calculator	Perform mathematical calculations.
	Daily Paper	Browse latest news from around the world
	Easy Installer	Install apps from SD Card.
	Easy Uninstaller	Uninstall apps from device.
	Email	Send/Receive email using your existing email addresses.
	Explorer	File manager for viewing and managing files and apps.
	Kobo	Browse over 2.4 million eBooks from the Kobo Library.

Application	Description
OfficeSuite	Opens Word, Excel, PowerPoint and PDF documents directly from device.
Photos	View and manage photo files.
Settings	Multiple settings for personalizing and enhancing your device.

Weather

1 Confirm Wi-Fi is available as indicated by .

2 Long tap on the cloud to display the search window and the virtual keyboard.

3 Using the virtual keyboard, enter the desired city in the search window.

4 Tap “SEARCH”.

5 Tap the HOME icon to return to the HOME screen.

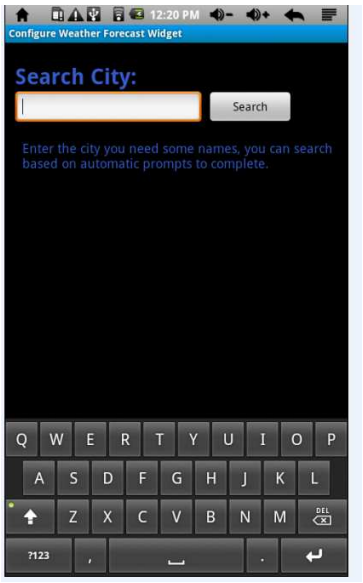
12:20 PM
Configure Weather Forecast Widget
Search City:
Search
Enter the city you need some names, you can search based on automatic prompts to complete.

Tap to display the overlay menu and to set the following options:

Option	Description
General Setting	Set the desired unit of measure for the temperature (℃ or ℉). Adjust the Auto Wallpaper settings.
My Cities	Set the desired location for updates. 1. Add the desired city. 2. Set the desired city to be **My City**.

Recording

From the *HOME Screen*, tap the *Recording* icon to create audio recordings.

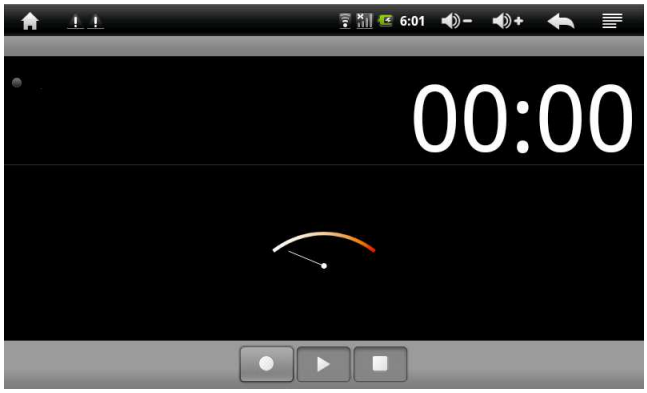

Function	Description
	Tap to start recording
	Tap to stop recording
	Press to play a recording

NOTE: Select a recording using the *File Explorer* and then play it using the *Audio Player* from the *All Applications* menu.

Music

- From the *HOME Screen*, tap the Music icon to play music and audio files.
- From the *All Applications* menu, tap the *Audio Player* icon to play music and audio files.

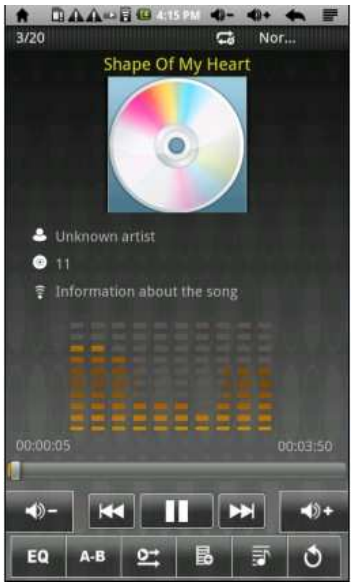

Function	Description
	Indicates the *Artist*
	Indicates the *Album*
	Indicates the *Genre*
	Tap to display a list of *All Music* on the device
	Tap to search the internet
	Tap to search the internet for information about the song
	Drag progression marker to scroll the audio process
	Tap to decrease volume
	Tap to play the previous song
	Tap to play/pause music
	Tap to play the next son
	Tap to increase volume
	Tap to adjust EQ setting (Normal/Rock/Pop/Classic/Bass/Jazz/User EQ)
	Tap for A-B repeat
	Tap to play songs in their order of storage
	Tap to add a song to the playlist
	Tap to view playlist
	Tap to exit the audio player.

Video

- From the *HOME Screen,* tap the video icon to play videos.
- From the *All Applications* menu, tap the *Video* icon to play videos.

Function	Description
	Tap to decrease volume
	Drag progression marker to scan video
	Tap to increase volume
	Tap to add a bookmark.
	Tap to adjust brightness.
	Tap to play the previous video.
	Tap to play/pause the video
	Tap to play the next video.
	Tap to adjust the screen magnification 16:9 / 4:3 / Full Screen / Original.
	Tap to exit the video player.
	Tap to access the following Menu options: • Delete bookmark to play from the beginning • Delete bookmark • Play mode: Single/Repeat, One/Repeat, All/Repeat • Help • Return

Photos

From the *HOME Screen or from the All Applications* menu, tap the *Photos* icon to view the photo gallery.

When viewing a photo,

- Tap the bottom of the photo to display the zoom bar:

  - Slide the zoom bar to the left to ZOOM IN.
  - Slide the zoom bar to the right to ZOOM OUT

- Tap the screen to display a floating toolbar at the top of the screen with the following functions:

Function	Description
	1. Tap to set Horizontal Slip, Hyperspace, Cross-fade
	2. Tap to rotate the photo left/right
	3. Tap to capture a portion of the photo
	4. Tap to set the photo as wallpaper
	5. Tap to display photo details (File Size/Resolution/Date Taken)
	6. Tap to return to the photo gallery
	7. Tap to set Horizontal Slip, Vertical Slip

File Explorer

- From the *HOME Screen*, tap the *Explorer* icon to manage files.
- From the *All Applications* menu, tap the *Explorer* icon to manage files.

Navigating files and folders:

Activity/Icon	Description
Drag finger UP/DOWN	Scrolls file list UP/DOWN
Tap file/folder	Opens the file/folder
	Tap to hide/display the toolbar
	Tap to return to the root directory
	Tap to go back one level in the directory
	Tap to select more than one file
	Tap to copy, delete, move, paste or rename a file or folder
	Tap to go back or forward one level in the interface
	Tap to allow management of all applications
	Tap to return to the *HOME screen*

Copying/Moving files and folders:

1. In the file list, scroll UP/DOWN to locate the desired file/folder to copy/move.
2. Touch and HOLD the desired file/folder until a pop-up menu appears.
3. Tap *COPY* or *MOVE* from the pop-up menu.
4. Navigate to the location where the file/folder is to be copied/moved.
5. Tap the *Editor* icon

from the toolbar and then choose *PASTE.*

Deleting files and folders:

1. In the file list, scroll UP/DOWN to locate the desired file/folder to delete.
2. Touch and HOLD the desired file/folder until a pop-up menu appears.
3. Tap *DELETE.*
4. Tap *DELETE* to confirm or *CANCEL* to quit.

Renaming files and folders:

1. In the file list, scroll UP/DOWN to locate the desired file/folder to rename.
2. Touch and HOLD the desired file/folder until a pop-up menu appears.
3. Tap *RENAME.*
4. Tap the input field to display the virtual keyboard.
5. Choose letters from the virtual keyboard to rename the file/folder.
6. Tap OK to confirm the new name.

Selecting multiple items:

1. Tap the *MULTI* icon

.
2. In the file list, tap to select the desired items.

   NOTE: Selected items will turn red. (To deselect a file/folder, tap it again.)
3. Tap the *Editor* icon

from the toolbar to delete, copy, or move the selected files.

Transferring media between a computer and the device:

Use the *File Explorer* to copy files between an external storage device and the eGlide Reader.

NOTE: The pre-installed applications and the Android OS occupy a considerable part of the capacity. It is normal to see a difference between available memory space and total capacity.

1 Connect the device to a computer with the supplied USB cable.

2 Allow the device to turn ON then observe the question of whether to CONNECT or CANCEL.

3 Tap CONNECT to connect the device to the computer.

4 Observe the two removable disk drivers shown on the computer's explorer: one is the internal memory of the device and the other is the memory card inserted into the device.

5 Copy files to/from these disk drivers just as you would the hard drive on your computer.

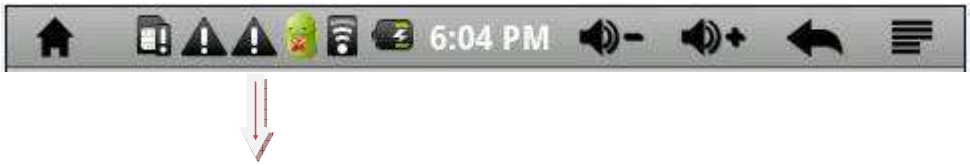

6 Once the data transfer is complete, drag from the top bar downwards to display the USB notification message.

7 Tap "Turn OFF USB Storage".

8 Tap "Turn OFF" to disconnect the device from the computer.

To safely remove the device from the computer:

1 Left click the icon at the right bottom corner of the computer desktop.

2 Click the pop-up mini window message of " stop the USB Mass Storage Device".

3 Disconnect the device from the computer.

Web Browser (requires Wireless Internet)

- From the *HOME Screen,* tap the *Browser* icon to access the internet.
- From the *All Applications* menu, tap the *Browser* icon to access the internet.

Activity/Icon	Description
Drag finger UP/DOWN	Scrolls web page UP/DOWN
Tap link	Opens the link ***NOTE:*** Several web pages can be opened at one time. View them all at once on the screen and then tap one of them to view it in full screen.
	Tap to go back to the previous web page
	Tap to display the available menu items ***NOTE:*** Depending on the web browser, tapping and holding an item may give access to more options.
Go	Use the virtual keyboard to enter the address of a website to visit Tap GO to open the desired website in the current window.

Activity/Icon	Description
Bookmarks	Tap to open the *BOOKMARKS* manager, which consists of three tabs: **Bookmarks:** Shows a list of bookmarks. • Tap a bookmark to open it in the current window. • Use the menu icon to bookmark the last-viewed page. ***NOTE:*** Tapping and holding a bookmark accesses several options (edit, rename, delete, etc.). **Most Visited:** Shows a list of the most visited websites. **History:** Shows a list of recently visited websites. Tap the menu icon to clear the *History*.
New Window/Windows	Tap to open new windows or to display all windows currently open.
Refresh/Stop	**Stop** will stop loading a web page, if it is currently opening. **Refresh** will refresh the current web page, if it has stopped loading.
Forward	Tap to go to the next page that has been previously browsed.
More	Tap to access additional options (find on page, select text, page info, downloads, settings, etc.)
	Tap to go directly to the *HOME screen*.

Email (requires Wireless Internet)

- From the *HOME Screen,* tap the *Email* icon to access email.
- From the *All Applications* menu, tap the *Email* icon to access email.

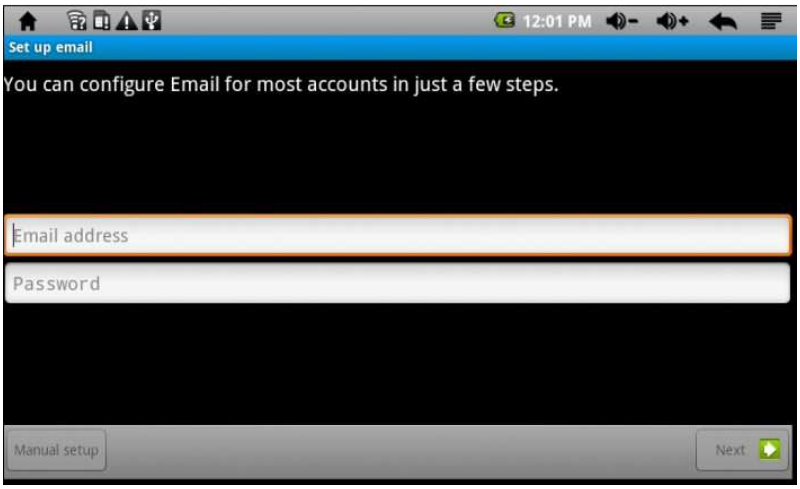

To utilize the email feature, an active email account must exist where emails can be sent and received. This email address must be setup on the device:

1. Observe the prompt to setup an account when you launch the email application.
2. Tap *NEXT* to start setup.
3. Tap in the input fields to enter the email address and login password using the virtual keyboard.
4. If desired, tap *Send email from this account by default* to make this address the default email account.
5. Tap *NEXT* to continue.
6. Tap in the input field to enter the POP3 and IMAP server information.

NOTE: POP3 and IMAP information can be gotten from the service provider, network administrator, or the Internet.

7. Tap *NEXT* to continue and to allow the device to check the server settings and proceed to the SMTP+ domain name.

NOTE: Multiple email accounts can be setup and stored on the device. However, only one can be the default account. The device will automatically use the default email account when the email application is launched.

Managing email accounts:

To add another account:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
2. Tap the function menu icon to display the email sub-menu options.

3. Tap *Accounts* to display a list of current email accounts stored on the device.
4. Tap the function menu icon to display the accounts sub-menu options.
5. Tap *Add Account*.
6. Follow the steps for setting up an email account to add an account.

To delete an account:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
2. Tap the function menu icon to display the email sub-menu options.
3. Tap *Accounts* to display a list of current email accounts stored on the device.
4. Touch and HOLD the account to be deleted until a pop-up menu appears.
5. Tap to select *Remove Account* from the pop-up menu.
6. Tap *OK* to confirm the deletion.

To check account settings:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
2. Tap the function menu icon to display the email sub-menu options.
3. Tap *Accounts* to display a list of current email accounts stored on the device.
4. Touch and HOLD the account to be checked until a pop-up menu appears.
5. Tap *Account Settings* from the pop-up menu to display the setting information for the selected account.
6. Edit the setting information, as desired, for the selected account.

Viewing email messages:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
2. From the mailbox, slide the list of messages UP/DOWN to scroll through the email list and to locate the desired message.
3. Tap an email message to open it for viewing.
4. Touch and HOLD the message or touch and HOLD the function menu icon to display the email sub-menu options (reply, forward, or delete).

Viewing the email menu:

1. Launch the email application from the *HOME screen* or the *All Applications* menu.
2. From the mailbox, tap the function menu icon to display the following email sub-menu options:
    a. Refresh: reloads the list of email messages

b. Compose: Write a new email message to be sent

c. Accounts: View a list of email accounts stored on the device

d. Account Settings: Display and edit account setting information

Accessing eBooks

Understanding Adobe DRM:

A Digital Rights Management (DRM) eBook is a copy-protected eBook. There is no simple way to check if your eBook has DRM or not. But most of the time, if you paid for the book, it's most likely a DRM file. If the book was free, it is probably not a DRM file.

Transferring DRM eBooks with Adobe Digital Editions:

1 Download the free *Adobe Digital Editions* eBook reader software to your computer from http://www.adobe.com/products/digitaleditions

2 Download an eBook to your computer and open it with *Adobe Digital Editions* to view eBooks in the PDF and ePUB formats.

3 Connect the device to your computer via the USB cable.

4 Open *Adobe Digital Editions* software.

5 Tap *All Items.*

6 Select the files or eBooks to transfer from the computer to the device.

7 Drag the desired files to the device, identified as EBW404.

8 After the transfer of files is complete, click *Safely Remove Hardware* on the computer's taskbar.

9 Select *Removable Disk*.

10 Disconnect the USB cable from the computer when the message *"It's safe to remove the device"* is displayed.

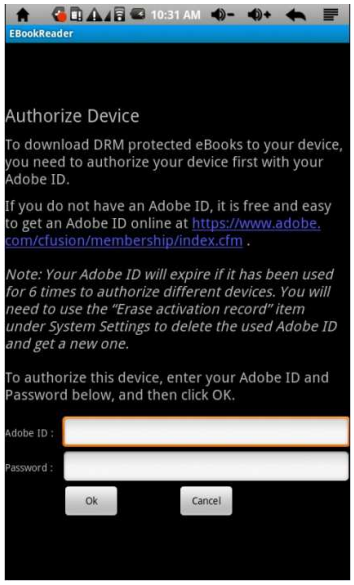
10:31 AM
EBookReader
Authorize Device
To download DRM protected eBooks to your device, you need to authorize your device first with your Adobe ID.
If you do not have an Adobe ID, it is free and easy to get an Adobe ID online at https://www.adobe.com/cfusion/membership/index.cfm .
Note: Your Adobe ID will expire if it has been used for 6 times to authorize different devices. You will need to use the "Erase activation record" item under System Settings to delete the used Adobe ID and get a new one.
To authorize this device, enter your Adobe ID and Password below, and then click OK.
Adobe ID :
Password :
Ok
Cancel

Registering for an Adobe ID:

1 Confirm Wi-Fi is available as indicated by .

2 Swipe the row icons until reaching "ADE" or "Adobe Digital Editions" icon .

3 Tap the icon to open the "Authorize Device" window.

4 Tap the link in blue to navigate to the Adobe membership website:

https://www.adobe.com/cfusion/membership/index.cfm

5 Follow the directions on the Adobe membership website to register for an Adobe ID.

NOTE: Your Adobe ID will expire if it has been used more than 6 times to authorize different devices. You will need to use the “Erase Activation Record” function to delete the used Adobe ID and get a new one.

Authorizing the Device for Adobe DRM:

1 Confirm Wi-Fi is available as indicated by .

2 Swipe the row icons until reaching “ADE” or “Adobe Digital Editions” icon .

3 Tap the icon to open the “Authorize Device” window.

4 Enter your Adobe ID login and password to authorize the device for use with your Adobe ID.

NOTE: *Books transferred with Adobe Digital Editions desktop software must use the same Adobe ID on both the computer and the eBook Reader.*

Purchasing eBooks from the Online Store:

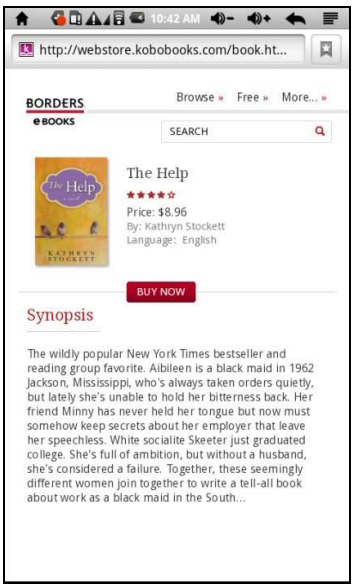
10:42 AM
http://webstore.kobobooks.com/book.ht...
BORDERS
eBOOKS
Browse »
Free »
More... »
SEARCH
The Help
Price: $8.96
By: Kathryn Stockett
Language: English
BUY NOW
Synopsis
The wildly popular New York Times bestseller and reading group favorite. Aibileen is a black maid in 1962 Jackson, Mississippi, who's always taken orders quietly, but lately she's unable to hold her bitterness back. Her friend Minny has never held her tongue but now must somehow keep secrets about her employer that leave her speechless. White socialite Skeeter just graduated college. She's full of ambition, but without a husband, she's considered a failure. Together, these seemingly different women join together to write a tell-all book about work as a black maid in the South...

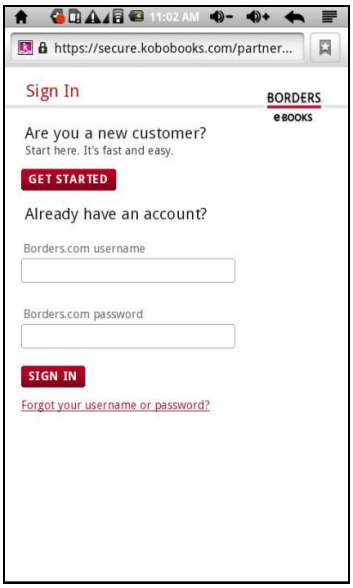

1 Browse the online store to find desired eBooks.

2 Tap “BUY NOW” to start the purchase process.

3 Sign-in with your payment account to start the checkout process.

4 If you do not have a payment account, tap “GET STARTED” to create one.

5 Tap “BUY NOW” to complete the checkout process.

NOTE: Some applications may not work on the device due to the screen resolution or system incompatibility.

De-Authorizing the Device from your Adobe ID:

1 Navigate to *Settings* on the *All Applications* menu .

2 Scroll to and tap *Erase Activation Record* to de-authorize the device from your Adobe ID.

De-Authorizing a computer from your Adobe ID:

1 Open *Adobe Digital Editions* from the computer.

2 Simultaneously press Ctrl+Shift+D on the computer keyboard.

3 Click *Deauthorize*.

Transferring eBooks with KOBO:

1 Navigate to *KOBO* on the *All Applications menu* .

2 Tap the KOBO icon to launch the application.

3 Once the application opens, you will be prompted to “Sign In” or “Create an Account.” If you do not have a Kobo Account, you can create one here. If you already have a Kobo Account, you may sign in.

4 Use the *Shopping Cart* icon to search/browse for books to purchase.

5 Once eBooks have been purchased, *Sync* the eBooks in the device’s library.

6 Tap on the *Library* icon to display your Kobo eBook Library.

7 If an eBook is not displayed in the library, tap the function menu icon , then tap “Refresh” to display recent purchases.

Transferring Non-DRM eBooks, Music, and Video:

To transfer non-DRM eBooks, music, or video files to the unit, simply connect the device to your computer and use Windows Explorer to copy from your PC to the drive you want via Copy/Paste or dragging and dropping files (same as you would do with a flash drive). You can transfer files either directly to the memory of the unit, or to a memory card that is inserted into your computer.

Reading eBooks

From the home screen, tap an eBook to begin reading.

Paging Up/Down

While reading an eBook do one of the following to move through the eBook:

- Slide the screen to the left or right.
- Tap the left or right side of the screen.
- Tap the *Previous/Next* buttons on the device.

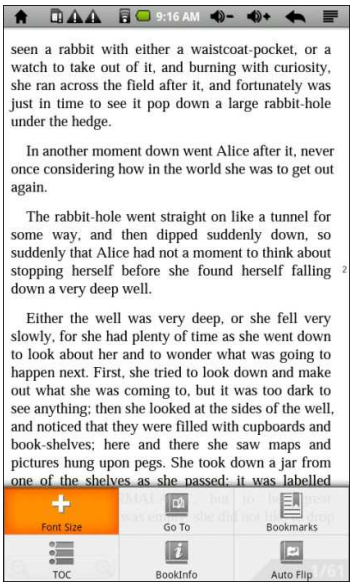
9:16 AM
seen a rabbit with either a waistcoat-pocket, or a watch to take out of it, and burning with curiosity, she ran across the field after it, and fortunately was just in time to see it pop down a large rabbit-hole under the hedge.
In another moment down went Alice after it, never once considering how in the world she was to get out again.
The rabbit-hole went straight on like a tunnel for some way, and then dipped suddenly down, so suddenly that Alice had not a moment to think about stopping herself before she found herself falling down a very deep well.
Either the well was very deep, or she fell very slowly, for she had plenty of time as she went down to look about her and to wonder what was going to happen next. First, she tried to look down and make out what she was coming to, but it was too dark to see anything; then she looked at the sides of the well, and noticed that they were filled with cupboards and book-shelves; here and there she saw maps and pictures hung upon pegs. She took down a jar from one of the shelves as she passed; it was labelled
Font Size
Go To
Bookmarks
TOC
BookInfo
Auto Flip

Customizing the Display

While reading an eBook, tap the function menu icon to access the following display options.

Option	Description
Font Size	Choose between S / M / L / XL / XXL.
Go To	Enter a number to jump to that page.
Bookmarks	Manages Bookmarks (Show / Add / Delete)
TOC	Displays the outline of the eBook, showing the main chapters and topics.
BookInfo	Displays title and author of eBook
Auto Flip	Enter the number of seconds the device will wait before automatically advancing to the next page.

Accessing History and My Library

- From the home screen, tap *History* to view the reading history.
- From the home screen, tap *My Library* to enter the eBook library to show all the eBooks stored in the device.

Viewing eBook Information

Navigate to the *History* or *My Library* options to view eBook information (book name/author/publication year).

NOTE: Title and author information are also accessible via the function menu within the eBook.

Storing eBooks

Navigate to the *History* or *My Library* options to view eBook information (book name/author/publication year).

Searching files stored on the device

Use the search bar to locate files on the device

NOTE: Search the eBooks stored on the device either by fuzzy query (a word or two related to the eBook) or by entering the full name of the book.

Settings

- Tap the *Settings* icon to access the settings menu.
- Tap to select the desired setting to be viewed or edited.

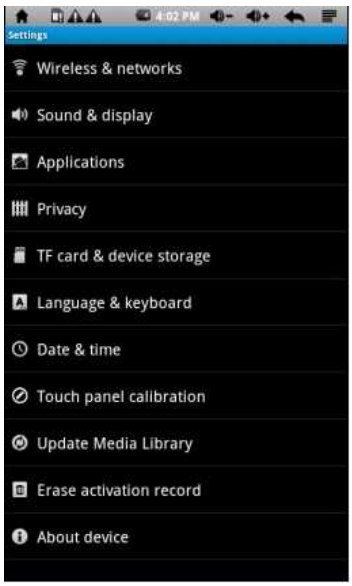

Trouble shooting

Cannot power ON the device

- When the battery is low the device cannot be powered ON. Conect it to a computer via USB or use the wall charger to charge it before powering on the device again.
- Reset the device to see if it can power ON normally.
- Check with the computer to see if connects correctly.

No sound from the earphone

- Check if the volume is set to 0.
- Check if the music or video is damaged. Try to play with other files. If the files are damaged it might cause serious noise or leaps.

Cannot copy files

- Make sure the connection with the computer is correct.
- Check if the memory is FULL.
- Check if the USB cable is broken.

Specifications

Dimension	194 * 126 * 11.8 cm	
Display	Size	7.0 inch 16 MP TFT Screen
	Resolution	800*480
Connect with PC	High speed USB2.0 □FS□	
Built-in flash	Flash Memory □4GB	
Internal memory	ROM□DDRII 256 MB	
Extended memory	Support microSD card up to 6GB	
Power	Built-in 3.7V□2500MA/H Li-Battery , AC charger:Input:AC110V~240V,Output:DC 5V@2A	
	support 4hours Video playback	
Music Function	Format	MP3□WMA□FLAC□AAC □OGG□WAV
	Support MP3 bit rate	8Kbps ~ 390 Kbps
	Support WMA bit rate	5Kbps ~ 192 Kbps
Video Function	Format	MPEG-1,FLV, H.264 & More!
	Support maximum resolution	25fps@720P
	Screen size	4□3□16□9□Full screen
Photo browsing	Support JPG□JPEG□BMP□GIF	
EBooks	Format	PDF□EPUB□FB2□ TXT□MOBI□PDB□RTF
Languages	Simple Chinese, Traditional Chinese, English, Japanese, French, Germany, etc.	
PC operate system	Windows98 SE/ME/2K/XP	

This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

Limitations of Liability Statement

Links to Third Party Sites

The Ematic User Manual may contain links to third-party sites, however, please be aware that Ematic is not responsible for and cannot control these other sites. Ematic makes no representations or claims whatsoever about any other website which you may access through this user manual. When you access a non-Ematic website, even one that may contain an Ematic logo, please understand that is independent from Ematic, and that Ematic may have no control over the content on that website. In addition, a link to a non-Ematic website does not mean Ematic endorses or accepts any responsibility for the content, or the use, of such website. It is up to you to take precautions to ensure that whatever you select for your use is free of such items as viruses, worms, Trojan horses and other items of a destructive nature. The Ematic User Manual is for your exclusive benefit and you assume all risks, losses and/or damages of whatever nature that may result in using the Ematic User Manual.

Limitation of Liability and Indemnity

To the maximum extent permitted by applicable law, Ematic shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials, use of the Ematic User Manual or use of any Ematic product and/or software. In no event shall Ematic be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages (including, without limitation, loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach or in tort, even if Ematic has been previously advised of the possibility of such damage. You agree that you have sole responsibility for adequate protection and backup of data and/or equipment used in connection with the product and software and will not make a claim of any nature against Ematic for lost data, inaccurate output, work delays or lost profits resulting from the use of the materials. You agree to indemnify, hold harmless and defend Ematic, together with its affiliates, parent and subsidiary entities, successors, assigns, partners, managers, members, employees, officers, directors and shareholders, from and against any and all damages, liens, liabilities, losses, demands, actions, causes of action, claims, costs and expenses (including, without limitation, reasonable attorneys' fees, charges and disbursements, as well as the cost of in-house counsel and appeals) arising from or related to Ematic, the use of The Ematic User Manual or any Ematic product and/or software. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Copyright © 2011 Adobe Systems Incorporated. All rights reserved.

©2010 Kobo Inc. All rights reserved. TM Kobo, the Kobo logo, the Kobo eReader logo and eReading: anytime. anyplace. are trademarks of Kobo Inc., 364 Richmond Street West, Suite 300, Toronto, ON M5V 1X6 Canada. All rights reserved. Borders is the registered trade mark of Borders Properties Inc.

Copyright © 2011 Microsoft. Word, Excel, and PowerPoint are trademarks of Microsoft.

Copyright © 2011 Ematic. All Rights Reserved.

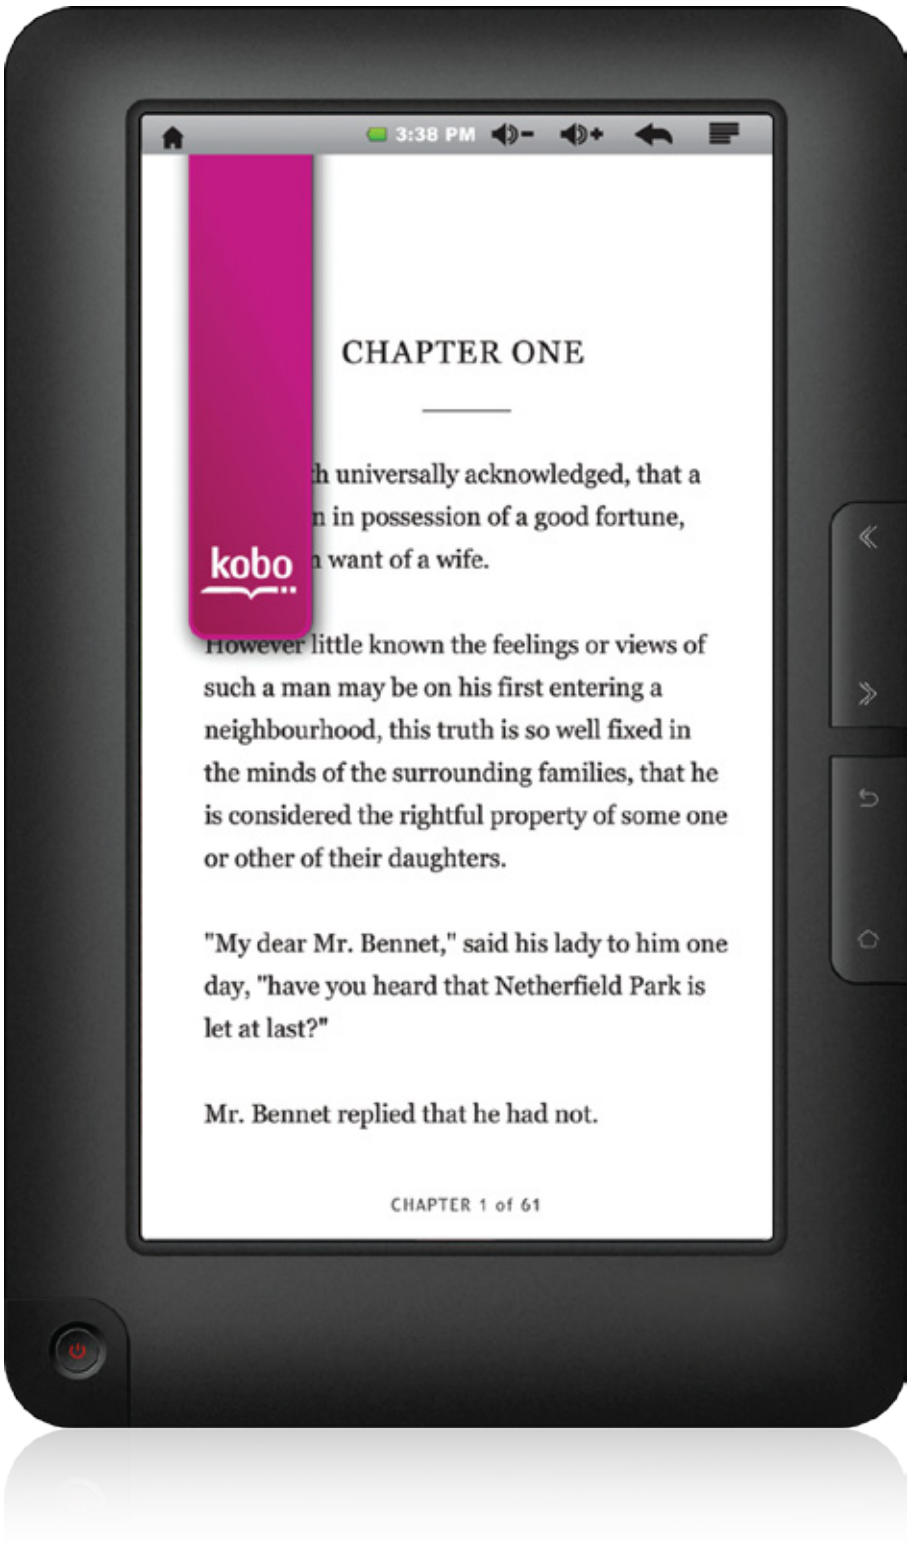
3:38 PM
kobo
CHAPTER ONE
h universally acknowledged, that a
n in possession of a good fortune,
want of a wife.
However little known the feelings or views of such a man may be on his first entering a neighbourhood, this truth is so well fixed in the minds of the surrounding families, that he is considered the rightful property of some one or other of their daughters.
"My dear Mr. Bennet," said his lady to him one day, "have you heard that Netherfield Park is let at last?"
Mr. Bennet replied that he had not.
CHAPTER 1 of 61

©2011 Ematic. All Rights Reserved. Android is a registered trademark of Google Inc. Use of this trademark is subject to google permisions.